



# DATAKOM

## DKG-253 GOVERNOR CONTROLLER



### FEATURES

- 12 and 24V operation***
- Capable of governing various engines***
- Forward acting actuator output***
- Fast and accurate response***
- Starting fuel adjustment***
- Speed ramp adjustment***
- Overspeed alarm output***
- Adjustable rated and idle speeds***
- Isochronous and droop operation***
- Gain and stability adjustments***
- External speed adjustment capability***

- Synchronizing and load sharing input***
- Switchmode output circuit***
- 10 Amps continuous current output***
- Speed sensor failure detection***
- Battery reverse voltage protection***
- Output short circuit protection***
- Rugged design***
- Enamel protected electronic circuit***
- Small dimensions (130x110x27mm)***
- Low cost***

## TABLE OF CONTENTS

### Section

- 1. INSTALLATION**
  - 1.1. Introduction to the Control Unit**
  - 1.2. Mounting the Unit**
  - 1.3. Wiring the Unit**
- 2. INPUTS AND OUTPUTS**
- 3. OPERATION OF THE UNIT**
- 4. STARTING THE ENGINE**
- 5. OTHER FEATURES**
  - 5.1 Isochronous and Droop Operation**
  - 5.2 Idle Speed Selection**
  - 5.3 External Speed Adjustment**
  - 5.4 Speed Adjustment for Automatic Synchronization**
  - 5.5 Starting Fuel Adjustment**
  - 5.6 Speed Ramping Adjustment**
  - 5.7 Overspeed Alarm Adjustment**
  - 5.8 Auxiliary power supply**
- 6. TROUBLESHOOTING**
- 7. DECLARATION OF CONFORMITY**
- 8. TECHNICAL SPECIFICATIONS**
- 9. CONNECTION DIAGRAM**
- 10. INSTALLATION DIAGRAM**

## 1. INSTALLATION

### 1.1 Introduction to the control unit

The DKG-253 is a low cost electronic governor control unit designed to control the engine speed with fast and accurate response to load changes.

The DKG-253 connects to a **forward acting** proportional electric actuator and a magnetic speed sensor. It is able to control a wide variety of engines in constant speed (isochronous) or droop modes.

The optimal response, specific to each engine is easily reached using the gain and stability adjustments.

The unit is capable to deliver actuator currents as high as 10 Amps. However the output circuit is protected against short circuits.

Protection against reverse battery connection and transient voltages are provided.

The unit is suitable for both 12 and 24V operation.

### 1.2 Mounting the Unit

The unit is designed to be mounted inside a control cabinet. A vertical mounting position is preferred so that the water caused by condensation could be drained away.

Extreme heat may affect the performance of the unit and should be avoided.

### 1.3 Wiring the Unit

The electrical connections of the unit are illustrated in chapter 9.

Cables of section 1.5mm<sup>2</sup> or higher should be used for battery and actuator connections (terminals A-B-E-F). The section needs to be increased with long cables.



**WARNING: THE UNIT IS NOT FUSED.**  
**Use external fuse for battery positive (terminal F)**  
**Install the fuse as nearly as possible to the unit.**

**The fuse rating should be 16 Amps.**

The signal connections on terminals C-D-G-H-J-K-L should be twisted or shielded for the entire length of the cable. The shield should be grounded at one end only. The other end of the shield should be left unconnected in order to avoid current flowing through it.

The gap between the magnetic speed sensor and the ring gear teeth should not be less than 0.50mm (0.020"). The usual way of adjusting the gap is backing up the sensor  $\frac{3}{4}$  turn after touching the ring gear teeth.

The magnetic speed sensor voltage should be at least 1.5 VAC RMS during cranking.



**WARNING: Do not rely exclusively on the governor controller-actuator system for engine overspeed protection. An additional overspeed shutdown means controlling the fuel solenoid should be installed on the engine.**

## 2. INPUTS AND OUTPUTS

Term	Function	Technical data	Description
A	ACTUATOR +	Output, 10A max	These outputs supply energy to the electric actuator. The output voltage will increase in order to supply more fuel to the engine. A short circuit protection is provided.
B	ACTUATOR -		
C	Magnetic pick-up	Input, 1-35VAC-RMS	Connect the magnetic pickup terminals to these inputs. The input voltage cannot be less than 1VAC-RMS. A signal of at least 3 VAC-RMS is recommended. The cable should be either twisted or shielded.
D	Magnetic pick-up		
E	Battery -	Input, 12 / 24V	Power supply connection. Use cables of adequate section for the actuator.
F	Battery +		
G	Speed trim / increase droop	Input	Speed trim potentiometer and increase droop switch input. Internally connected to <b>battery (-)</b> .
H	Increase droop	Input	Increase droop switch input.
J	Speed trim	Input	Speed trim potentiometer input. The cable should be either twisted or shielded.
K	Droop	Output	Connecting this terminal to terminal <b>L</b> will cause <b>DROOP</b> operation. The <b>DROOP</b> range is adjusted with the <b>DROOP</b> potentiometer.
L	Droop/Idle	Input	Droop mode and Idle speed setting input.
M	Idle speed select	Output	Connecting this terminal to terminal <b>L</b> will switch to <b>IDLE SPEED</b> operation. The <b>IDLE SPEED</b> is adjusted with the <b>IDLE</b> potentiometer.
N	External speed adjust	Input, 0-10 VDC	The external speed adjustment voltage should be connected to this input. The cable should be either twisted or shielded.
P	Auxiliary power supply	Output, 10V 20mA	Supply output for external devices. <div style="border: 1px solid black; padding: 5px; display: inline-block;"> <b>WARNING: Do not short-circuit this output. Otherwise the unit may get damaged.</b></div>

ALARM RESET	OVERSPEED ALARM RESET	Input, 0-40V-DC	Connect this terminal to battery negative in order to reset the overspeed alarm.
NC	Alarm Relay Normally Closed Terminal	Output, 10Amp @ 28V-DC	These relay terminals are provided in order to activate an external engine shutdown device. A possible application is to connect the engine fuel solenoid control signal serially to terminals NC and COM.
COM	Alarm Relay Normally Closed Terminal	Output, 10Amp @ 28V-DC	
NO	Alarm Relay Normally Open Terminal	Output, 10Amp @ 28V-DC	

### 3. OPERATION OF THE UNIT

The unit is designed to operate from a DC supply of 12 or 24 volts, which is usually the start battery. The battery is connected to terminals E and F. A reverse polarity protection is provided.

The unit should be supplied with a speed signal at the inputs C and D. The signal comes usually from a magnetic pickup unit mounted in close proximity of the engine ring gear. The frequency of the speed signal is proportional to the engine rpm.

The minimum acceptable amplitude of the speed signal is **1 VAC-RMS**. The acceptable frequency range is 500 Hz to 8'000 Hz. The use of a shielded cable is recommended. The shield should be grounded at one end only. The terminal **D** is internally connected to ground.

The actuator output is energized only when a speed signal is present. An internal signal detection circuit will shut-off the actuator if an adequate signal is not connected to the inputs.

The engine speed is adjusted with a multi-turn potentiometer. This will allow a precise adjustment of the desired engine rpm.

The stability of the speed is adjusted with the GAIN and STABILITY potentiometers. These potentiometers will modify the dynamic response of the unit to speed changes and allow adaptation to different type of engines.

The GAIN potentiometer adjusts the reaction rate of the unit to speed changes. The unit will become more sensitive as the potentiometer is turned clockwise. This will allow a faster return to the nominal speed when a load change occurs. Do not forget that excess gain will cause instability.

The STABILITY potentiometer injects a delay to the unit's reaction to speed changes. This will permit to match the unit to the engine size. The unit will become faster as the potentiometer is turned clockwise. This will allow a faster return to the nominal speed when a load change occurs. Do not forget that too fast response will cause instability.

The STARTING FUEL and SPEED RAMP potentiometers will prevent actuator from opening completely and minimize engine exhaust smoke experienced prior to attaining engine operating speed.

The OVERSPEED potentiometer adjusts the alarm speed value. When the engine overspeeds, this will activate the alarm output of the device and a warning LED. This output may be used to shut off the fuel or ignition to provide safe engine shutdown.

When the engine is stopped, the signal presence detection circuit will shut-off the actuator. During cranking, the speed signal will be well below the nominal speed, which causes the actuator to open fully. When the engine is fired, the actuator will stay open until the engine reaches the preset speed. Then the actuator will be supplied only with the amount of current necessary to maintain the preset speed.

A sudden load increase on the engine shaft will result to a speed drop. This will cause the actuator to open more in order to reach the preset speed. A sudden load decrease will cause a speed increase. This will cause the actuator to shut-off gradually until reaching again the preset speed.

The actuator output is a switchmode circuit which supplies nearly the battery voltage when turned on. This allows the unit to deliver high output currents with minimum self heating and a very good efficiency. The switching frequency is well above the natural oscillation frequency of the actuator moving parts and will not cause a visible effect.

## 4. STARTING THE ENGINE

### **Before starting:**

Do not modify the speed, starting fuel and speed ramping settings.

Turn the overspeed potentiometer fully clockwise.

Check that all other potentiometers are set to midcourse.

### **Starting the engine:**

Apply the DC power to the unit. The actuator should be closed.

Crank the engine. The actuator should open.

When the engine is running, adjust the gain and stability potentiometers counterclockwise until the engine is stable.

Adjust the nominal speed. The speed will increase when the SPEED potentiometer is turned clockwise and it will decrease when the SPEED potentiometer is turned counterclockwise.

### **Adjusting the response:**

Turn the GAIN potentiometer clockwise until the instability is reached, then gradually come back until the stability returns. Turn one division counterclockwise for safety.

Turn the STABILITY potentiometer clockwise until the instability is reached, then gradually come back until the stability returns. Turn one division counterclockwise for safety.

If stability cannot be reached please check the Troubleshooting section.

### **Adjusting the starting fuel:**

Connect L and M terminals in order to set Idle Speed mode.

Adjust the engine idle speed with IDLE potentiometer.

Turn the STARTING FUEL potentiometer counterclockwise until engine speed drops, then turn the potentiometer slightly clockwise to obtain again the desired idle speed.

### **Adjusting the speed ramping:**

Disconnect the L-M connection, check the ramping speed. If slower ramping is desired, then turn the potentiometer clockwise.

Connect and disconnect L-M jumper until desired ramping is reached.

### **Adjusting the overspeed alarm:**

Run the engine at rated speed.

Push and hold the TEST button. Rotate the overspeed potentiometer counterclockwise until the ALARM led turns on.

## 5. OTHER FEATURES

### 5.1 Isochronous and Droop Operation

The typical operation mode of the unit is isochronous (constant speed). However a droop operation may be required for load sharing purposes on genset engines.

In droop operation, the engine speed will decrease slightly with load increase. The load information is picked up from the actuator current, which increases together with the load.

The droop operation is selected by connecting together the terminals **K** and **L**. The amount of droop is adjusted with the related potentiometer. The droop range may be increased by connection together terminals **G** and **H**.

The droop range will be different for each engine-actuator combination. For a current increase of 1 Amperes, the droop range is adjustable within 1 to 5 % of the nominal speed.

The droop adjustment modifies also the speed setting, thus it is necessary to readjust the no-load speed after droop adjustment.

### 5.2 Idle Speed Selection

The unit offers the possibility of Idle/Nominal speed switching using an external switch. The idle speed is independently adjustable with a separate trimpot.

The idle speed is increased with the clockwise rotation of the adjustment trimpot.

Switching between idle and nominal speeds can be done while the engine is running.

### 5.3 External Speed Adjustment

An external speed adjustment potentiometer can be connected between terminals **G** and **J**. The potentiometer value should decrease with a clockwise rotation (speed increase).

The recommended potentiometer value is 5 K-ohms. A different value may also be used for an exact match of the desired adjustment range.

The external adjustment cable should be shielded for the best operation. The cable should be shielded at one end only.

### 5.4 Speed Adjustment for Automatic Synchronization

External speed adjustment signal from other control devices may be applied between terminals **N** and **G** (ground).

The input accepts 0 to 10V DC signals.

The remote speed adjustment cable should be shielded for the best operation. The cable should be shielded at one end only.

## 5.5 Starting Fuel Adjustment

Starting fuel adjustment minimizes the engine exhaust smoke from start to idle speed operation.

Place the engine in idle and adjust the idle speed. Adjust the STARTING FUEL potentiometer counterclockwise until the engine speed begins to fall. Increase the potentiometer slightly so that the idle speed is returned to the desired level. This position is advised for the minimum engine exhaust smoke.

Starting fuel rate is increased with the clockwise rotation of the adjustment trimpot.

## 5.6 Speed Ramping Adjustment

Speed Ramp adjusts the time that the engine requires to switch from idle speed to the rated speed.

The engine will ramp faster to the rated speed with the counterclockwise rotation of the SPEED RAMPING potentiometer.

## 5.7 Overspeed Alarm Adjustment

When the engine overspeeds, this will activate the alarm relay output and the alarm LED. Both NO and NC terminals of the internal relay are available.

The RESET pushbutton and the ALARM RESET input can be used to reset the overspeed alarm.

When the engine is running at the rated speed, push and hold the TEST button. Rotate the overspeed potentiometer counterclockwise until the LED lights. Release the TEST button and after the engine stops press the RESET button or connect BATTERY(-) to the ALARM RESET output or remove battery power. The overspeed function is now set to approximately 20% above the rated speed.

The alarm speed value is increased with the clockwise rotation of the adjustment trimpot.

## 5.8 Auxiliary power supply

An auxiliary power supply of 10V-DC / 20mA is provided.



**WARNING: Be careful to not to short-circuit the output, this may damage the unit.**

## 6. TROUBLESHOOTING

### The actuator is inoperative:

- 1) **Measure the DC-supply voltage between terminals F(+) and E(-) of the unit. You should read the battery voltage, if not:**
  - a) Check for a blown fuse
  - b) Check connections and wiring
- 2) **With the unit powered-up, measure the DC voltage between terminals P(+) and G(-). You should read 10V-DC ( $\pm 1V$ ). If not:**
  - a) The unit may be damaged due to a short circuit on terminal P.
- 3) **With the unit powered-up, momentarily connect terminals A and F. The actuator should open completely. If not:**
  - a) Check a mechanical obstruction on the actuator lever manually.
  - b) Measure the DC voltage on the actuator terminals:  
If the battery voltage is present, then the actuator is damaged.  
If there is no voltage, then check the actuator wiring.
  - c) If the fuse blows, then check a short circuit in the wiring.
- 4) **Crank the engine. Measure the AC voltage between terminals C and D. It should be at least 1VAC\_RMS. If not:**
  - a) Check the gap between the speed sensor and the gear teeth. If needed then readjust it as described in chapter 1.3
  - b) Check wiring.
  - c) The speed sensor may be defective.
- 5) **Crank the engine. Measure the DC battery voltage while cranking. It should be above 8 VDC for a 12V system and 16V for a 24V system. If below:**
  - a) The battery is weak or discharged.
- 6) **If the battery voltage is correct:**
  - a) Speed adjustment set too low, readjust.
  - b) The unit is defective.

### The engine speed is too low:

- 1) **Check the speed setting.**
- 2) **While engine running under governor control, measure the DC voltage between terminals A and B. If the voltage is close to the battery voltage:**
  - a) the actuator lever is mechanically obstructed from moving until full fuel position. Check mechanically that the lever has enough freedom of movement.
  - b) The spring mechanical resistance is too strong for the actuator. Check with a softer spring.
  - c) Check for misalignments and frictions on the actuator-fuel lever systems.

**Engine overspeeds:**

**Do not crank again.**

**1) With the unit powered-up, if the actuator opens fully:**

- a) Disconnect wiring at terminals C and D.

If the actuator closes then the speed signal is faulty, probably due to electrical noises. Check shielding and wiring.

If the actuator is still open, then disconnect the terminal A. If the actuator is still open, then the actuator is feeded by an external connection or short circuit. If the actuator shuts-off then the unit is damaged.

**2) Run the engine and hold the fuel lever manually with the engine at the requested speed:**

- a) Readjust the speed by rotating the speed trimpot counterclockwise. If desired speed cannot be reached then the unit is faulty.

**Speed unstable:****1) Readjust GAIN and STABILITY as described in chapter 4.****2) Check the speed sensor for:**

- a) Signal strength  
b) Wiring  
c) Shielding

**3) Check the actuator-fuel lever system for loose mechanical linkage, or friction:**

- a) Make the checks while the engine is operating.

**4) Check for electromagnetic disturbance sources in close proximity as:**

- a) battery chargers  
b) ignition systems  
c) radio transmitters.

Make a test by turning them off momentarily. If the stability cannot be reached, then enclose the unit in a separate and grounded metal sheet cabinet.

Systems in very harsh electromagnetic conditions as found in close proximity of powerful transmission systems may require shielding on all cables and even special EMI shielding.

**5) Check the engine fuel and injection system:**

Faulty injectors, blocked filters etc... may prevent the governor controller to maintain a constant speed.

## 7. DECLARATION OF CONFORMITY

The unit conforms to the EU directives  
-73/23/EEC and 93/68/EEC (low voltage)  
-89/336/EEC, 92/31/EEC and 93/68/EEC (electro-magnetic compatibility)

Norms of reference:


EN 61010 (safety requirements)  
EN 50081-2 (EMC requirements)  
EN 50082-2 (EMC requirements)

The CE mark indicates that this product complies with the European requirements for safety, health environmental and customer protection.

## 8. TECHNICAL SPECIFICATIONS

**DC Supply Range:** 10.0 to 33.0 V-DC  
**Current consumption:** 100mA max (actuator not connected)  
**Speed input range:** 500 Hz to 8000 Hz.  
**Speed signal amplitude:** 1 to 35VAC-RMS  
**Speed signal input impedance:** 10 K- ohms  
**External speed trim:**  
5 K-ohms trimpot between terminals G and J  
**External speed trim range:**  $\pm 6\%$  min @3000Hz  
**Auxiliary input (terminal N):**  
Input voltage range: 0 to 10VDC  
Input impedance: 1M ohms.  
Adjustment range:  $\pm 25\%$  min @3000 Hz  
**Steady state speed accuracy:**  $\pm 0.25\%$   
**Droop adjustment range:** 1 to 5% minimum  
**Actuator output:** 10 Amps continuous max  
**Overspeed alarm relay output:** 10 Amps @ 28VDC  
**Alarm reset input:** 0 to 40VDC.  
**DC supply output:** 10 volts DC, 20mA max  
**Operating temp.:** -20°C (-4°F) to 70 °C (158°F).  
**Storage temp.:** -30°C (-22°F) to 80 °C (176°F).  
**Maximum humidity:** 95% non-condensing.  
**Dimensions:** 130 x 110 x 27 mm (WxHxD)  
**Weight:** 350 g (approx.)  
**Mounting:** any position, vertical preferred

**9. CONNECTION DIAGRAM**

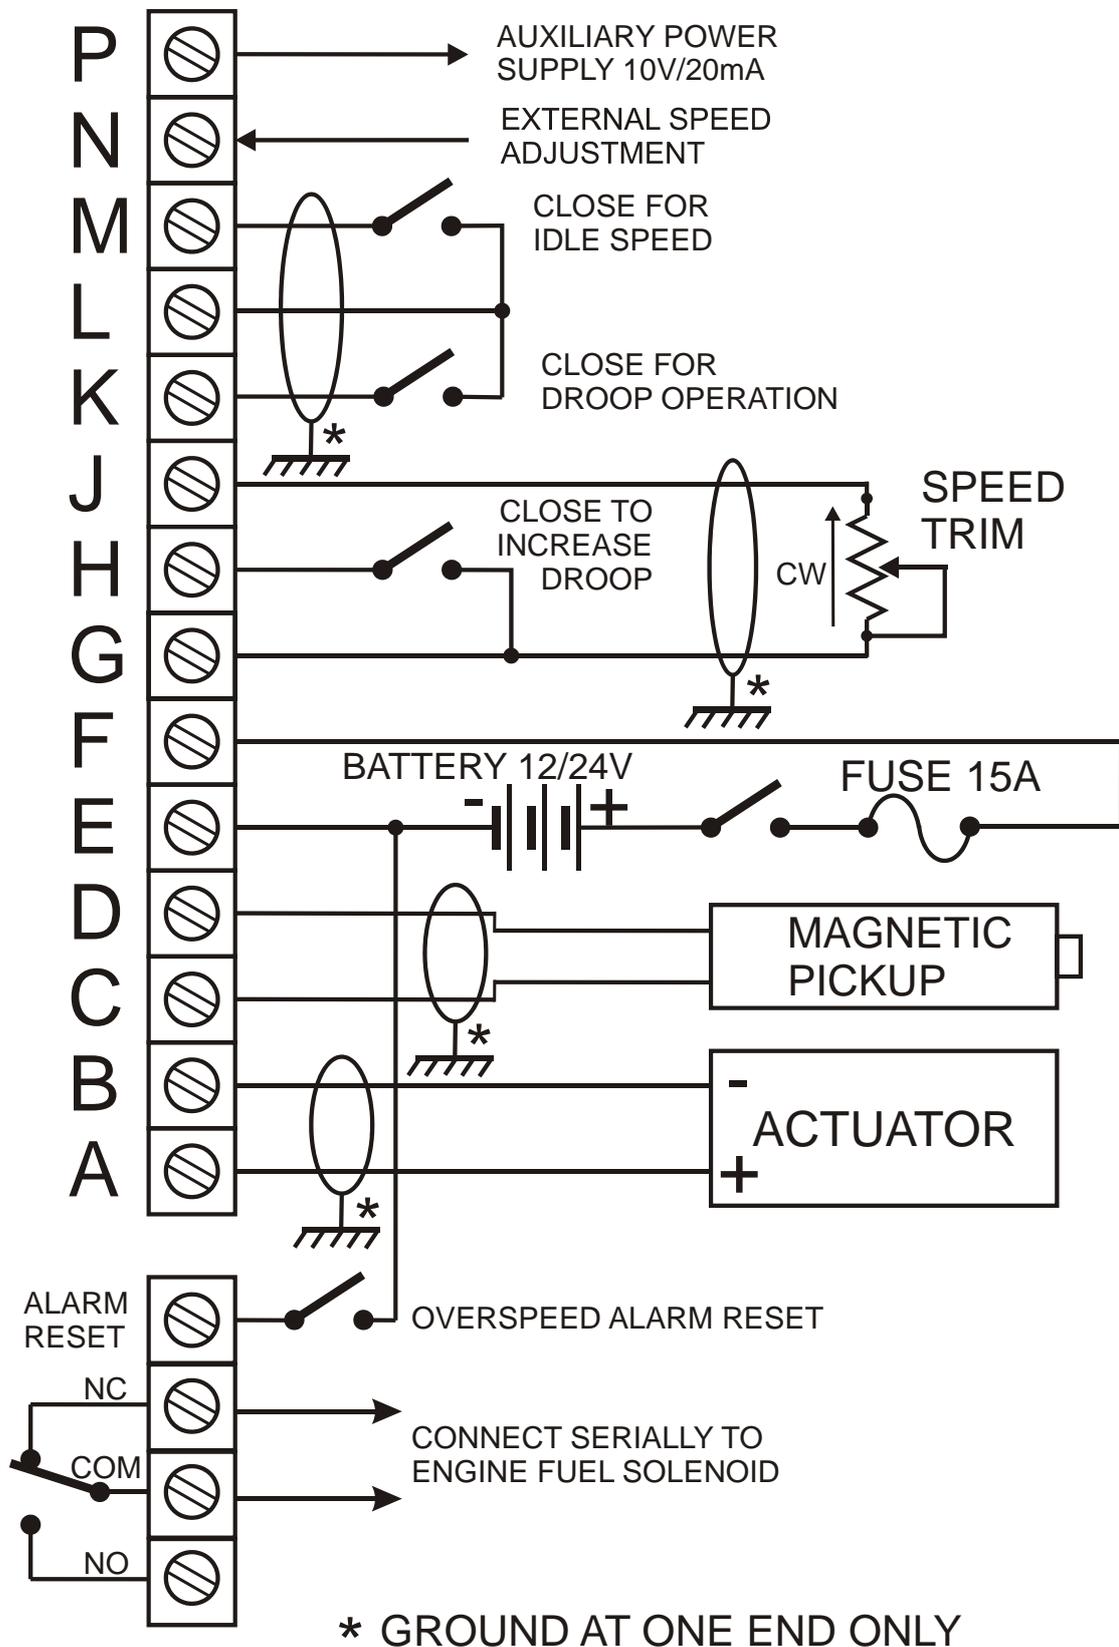

**10. INSTALLATION DIAGRAM**

